


Key

- Chicksgrove Replacement Stone
- Mortar Repair
- Rebed

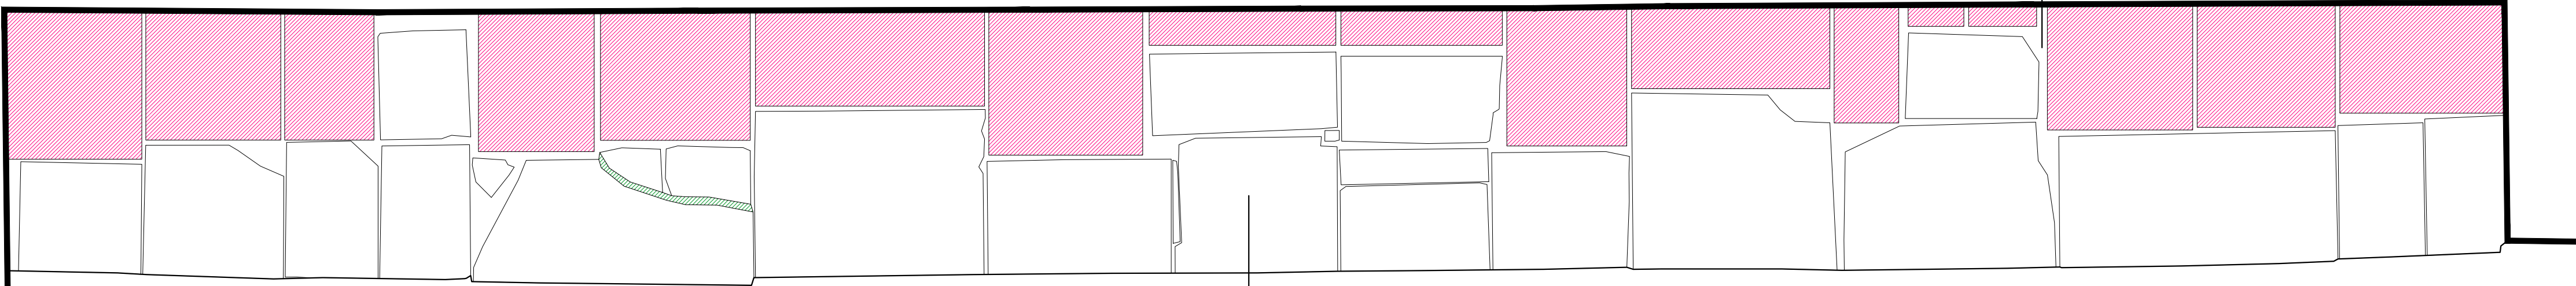

Replace broken stones with larger chicksgrove pavers to reduce mortar joints and risk of root penetration, and to help shed water to south.

Pavers to be rebed to facilitate removal of root system below

1 NO. 17 THE CLOSE - PLAN OF WALL WALK
P-06 1:20

18 South

Repoint all wall in
NHL2 mix lime mortar



Rebed all wall walk paving
Rebed coping stone

Remove iron peg

2 NO. 17 THE CLOSE - SOUTH ELEVATION
P-06 1:20

NO. 17 THE CLOSE