




All hatched rooms to have underfloor heating beneath existing timber floor boards. Carefully record existing floorboards, lift and set aside for reuse. Install insulation between joists and lay underfloor heating above insulation only. All existing timber to remain and all floorboards to be reinstated in the same locations as existing

Walls to Bathrooms F13 and F14 remodelled to enable new Family Bathroom F30

New lead roofed timber framed porch to back door, with existing stone step retained. Existing incongruous corrugated roofed structure previously removed to open up the west elevation

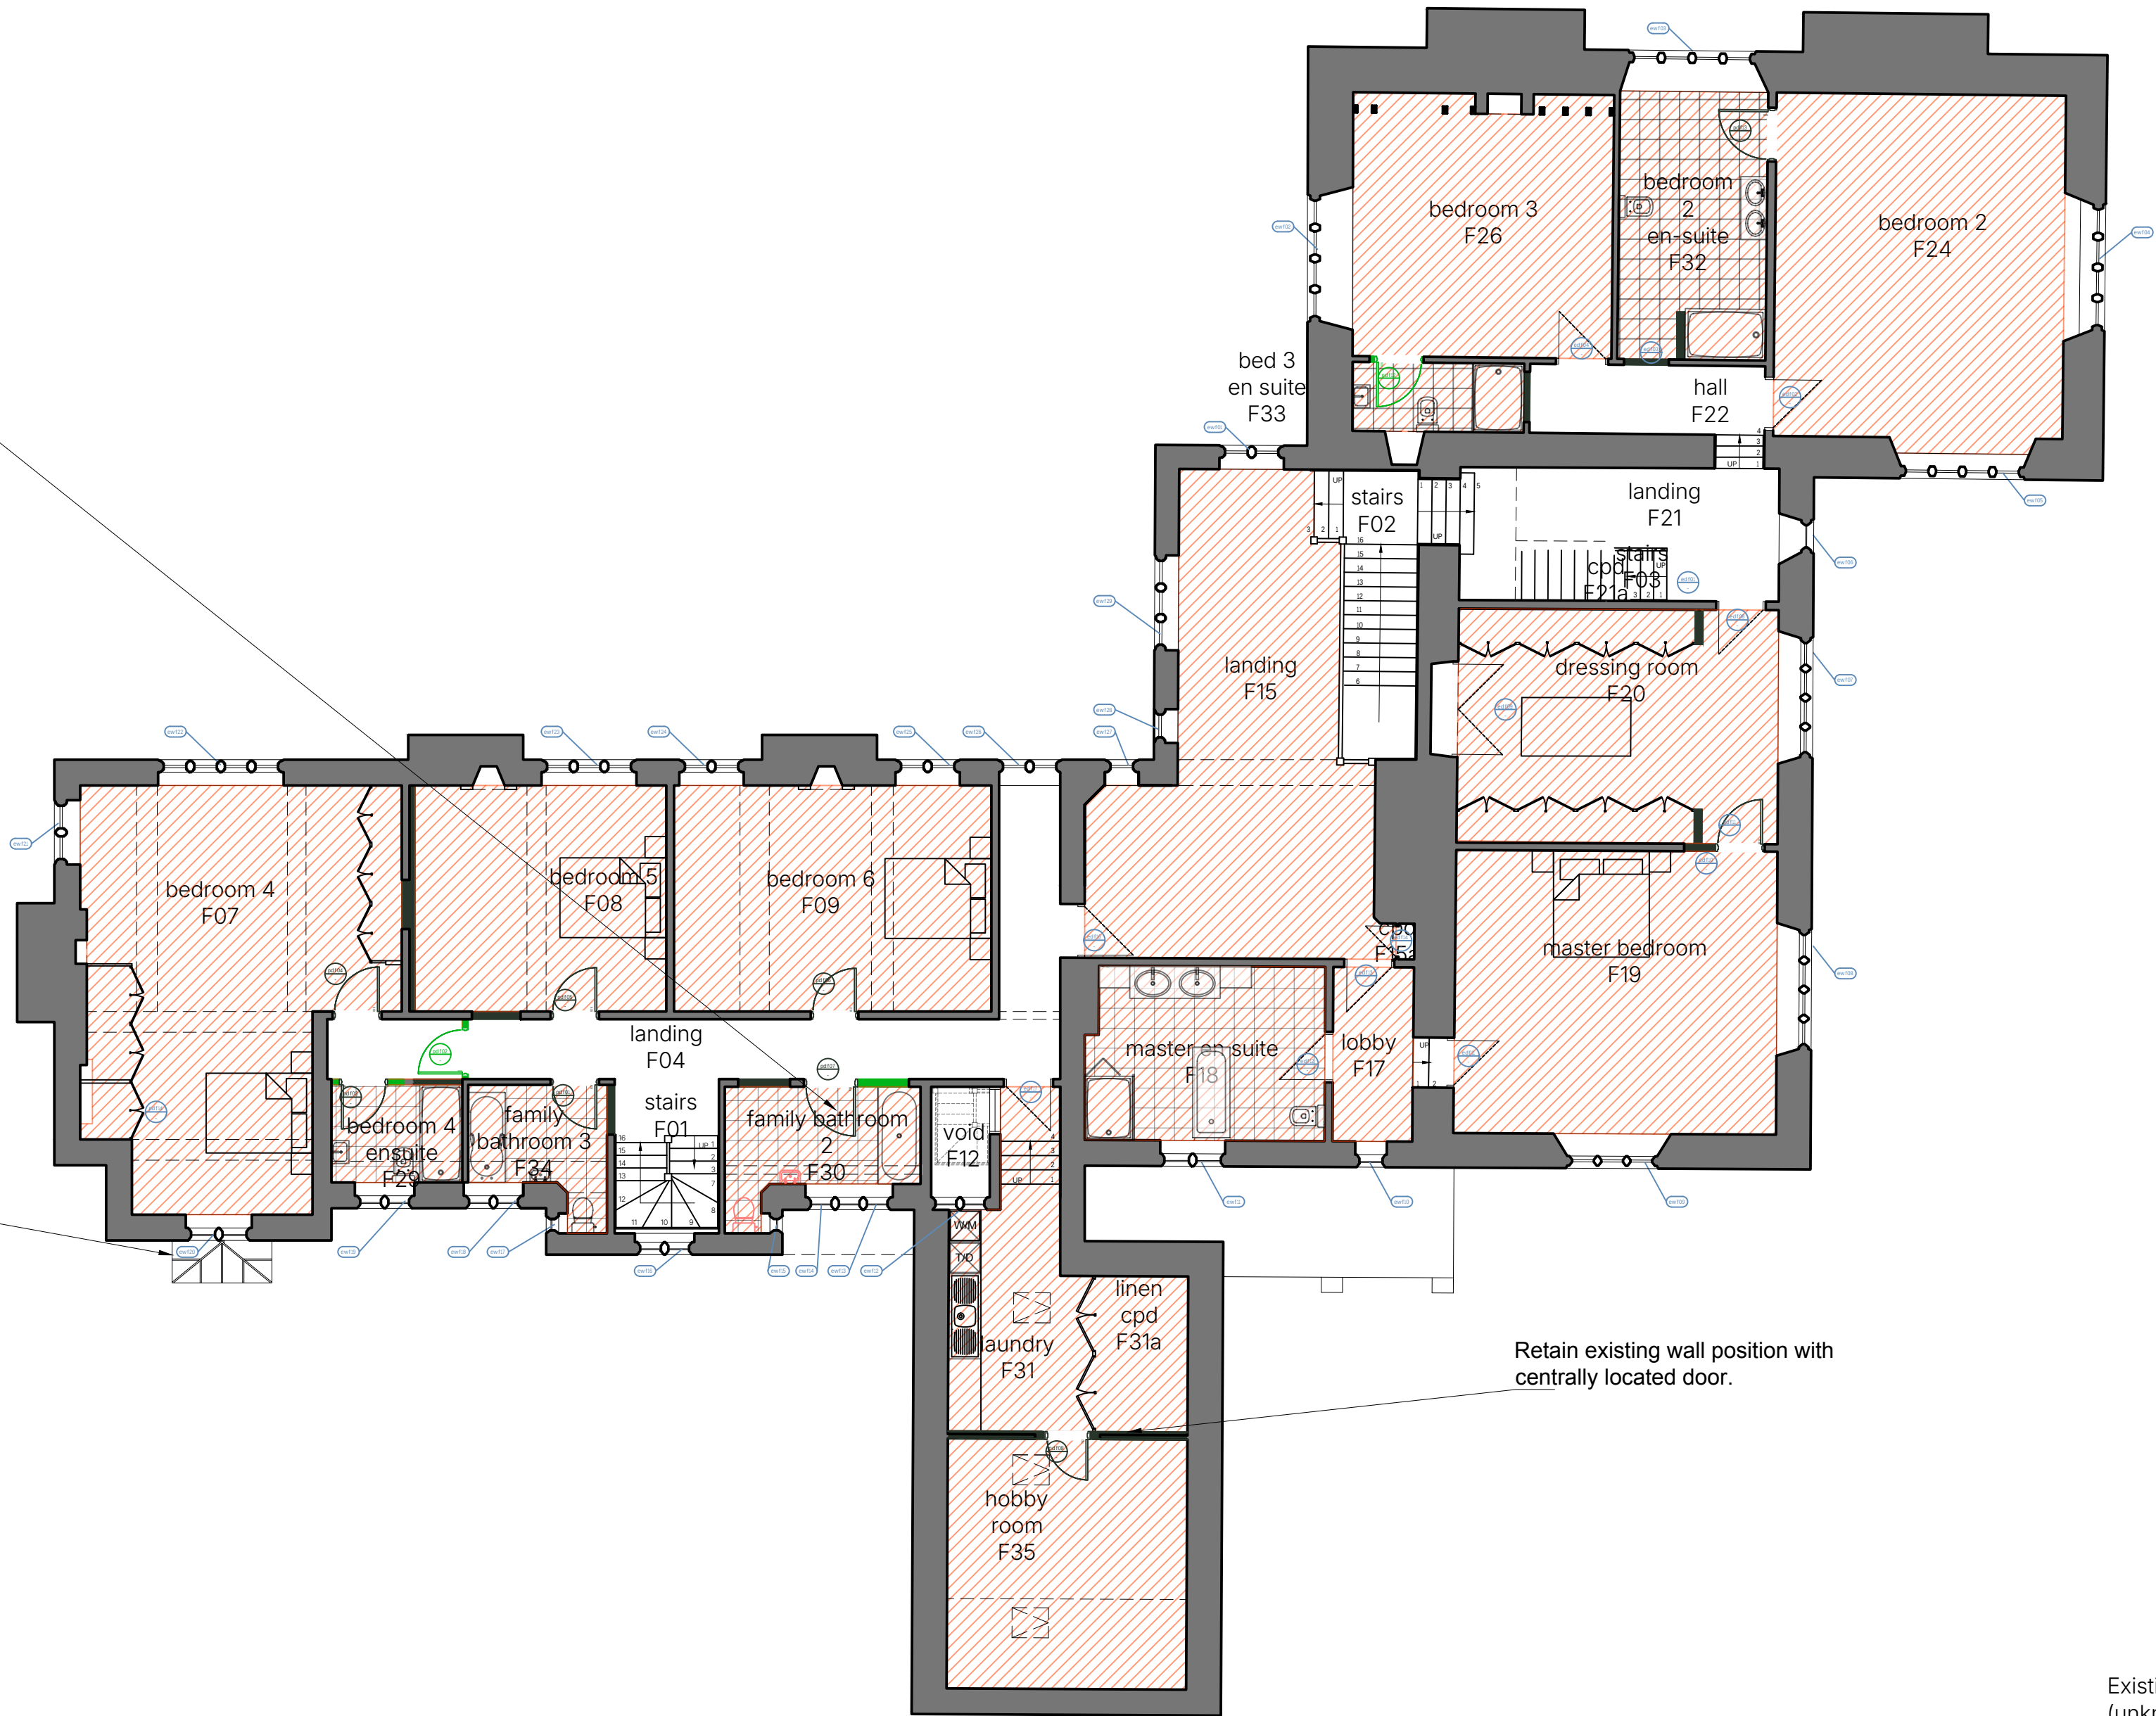

Retain existing wall position with centrally located door.

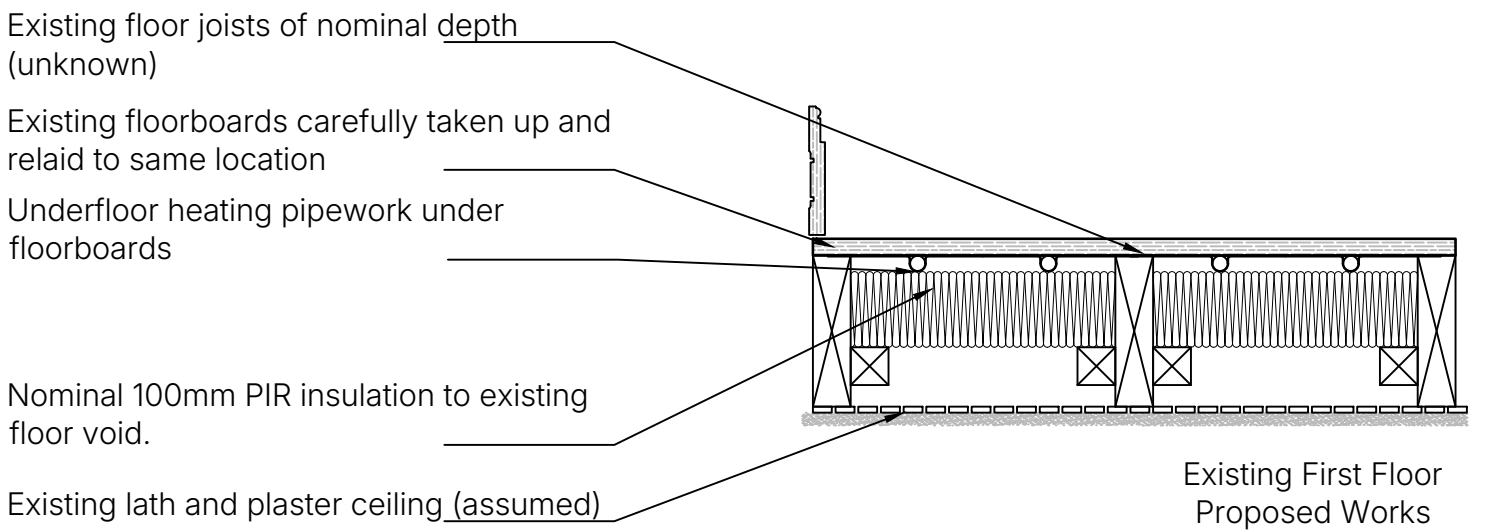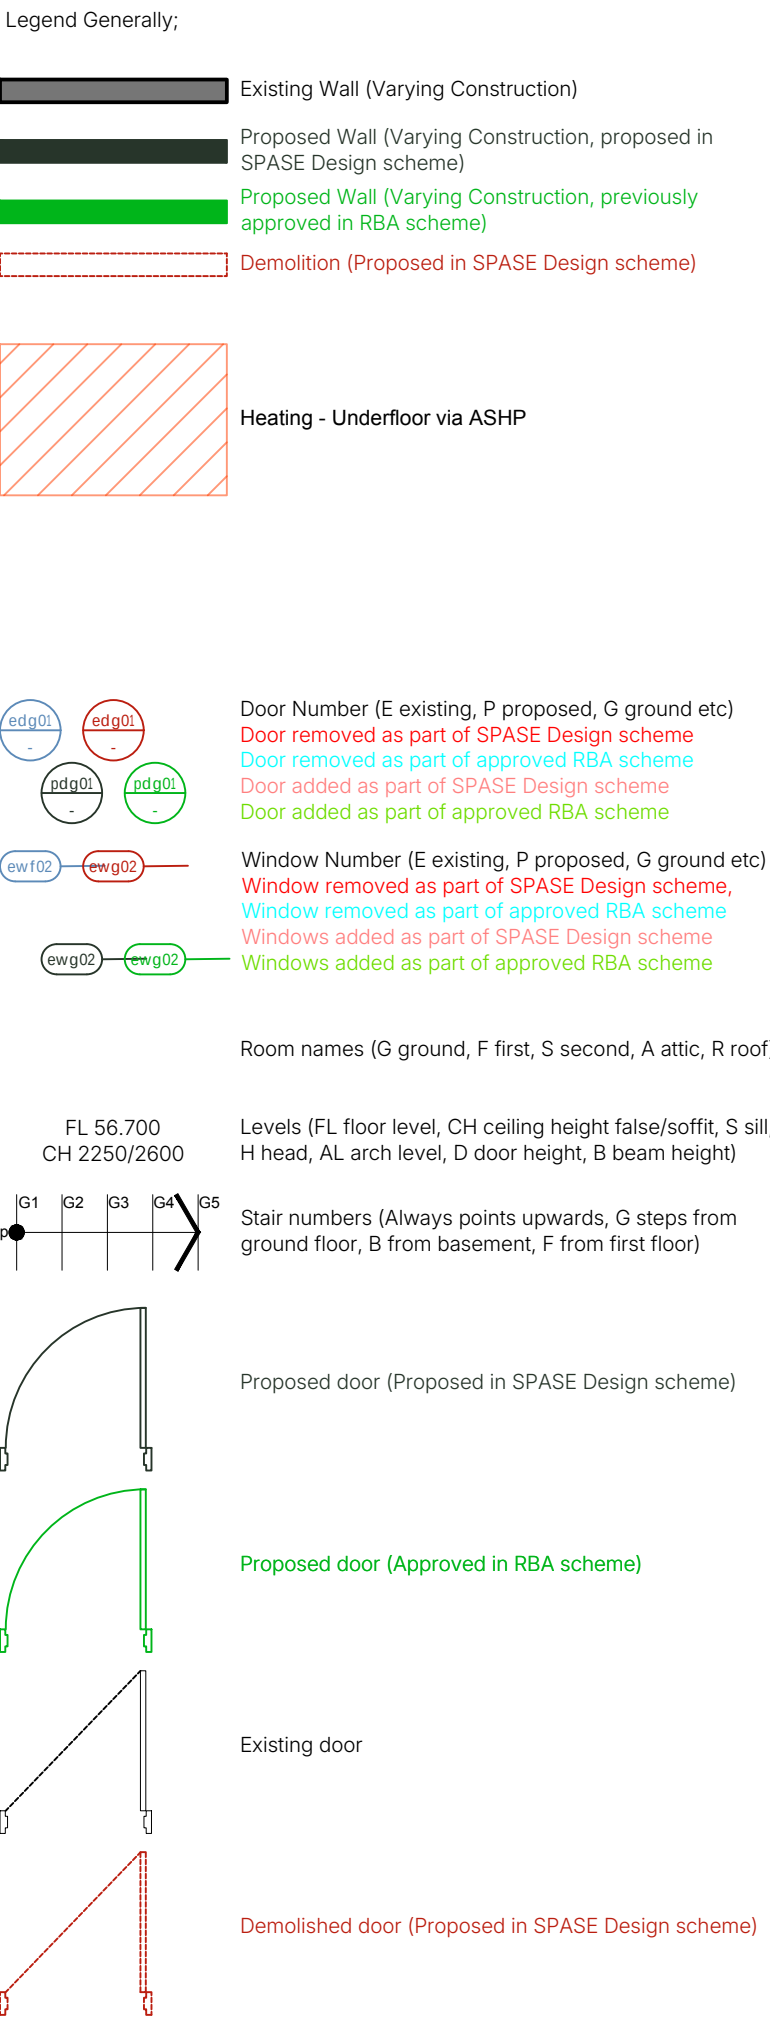

First Floor - Proposed

Underfloor Heating Detail - First Floor

