Protective Fencing

To be erected prior to the commencement of all works on site, and retained in place throughout construction.

To comprise of 2m tall welded mesh panels on rubber or concrete feet. Panels are to be joined together using a minimum of two anti-tamper couplers, installed so that they can only be removed from inside the fence. The panels should be supported on the inner side by stabilizer struts, which should should be attached to a base plate and secured with ground pins.
All weather notices should be erected at regular intervals on the weld mesh panels with words such as "Tree Protection Area - Keep out".

Tree Protection Area

KEEP OUT

Do **not** move this fence

(TOWN & COUNTRY PLANNING ACT 1990)
TREES ENCLOSED BY THIS FENCE ARE PROTECTED BY PLANNING CONDITIONS AND/OR ARE THE SUBJECT OF A TREE PRESERVATION ORDER. CONTRAVENTION OF A TREE PRESERVATION ORDER MAY LEAD TO CRIMINAL PROSECUTION

ANY INCURSION INTO THE PROTECTED AREA MUST BE WITH THE WRITTEN PERMISSION OF THE LOCAL PLANNING AUTHORITY

Arbtech Consulting Limited
Unit 3, Well House Barns, Chester, CH4 0DH
https://arbtech.co.uk, 01244 661170

Ground protection

Ground protection will consist of a combination of the existing surface, new temporary ground boarding and the proposed no-dig subbase. The no-dig subbase will be installed, along with the ground boarding, prior to any other site activity.

The existing had surface will be retained with the RPAs to act as passive ground protection. This will remain in situ for the duration of the development process. If removed/replaced this will be done under direct, onsite arboricultural supervision and replaced immediately with new temporary ground boarding or the replacement hard surface.

New temporary ground boarding should be capable of supporting any traffic entering or using the site without being distorted or causing compaction of underlying soil.

Note The ground boarding might comprise one of the following:

a) for pedestrian movements only, a single thickness of scaffold boards placed either on top of a driven scaffold frame, as to form a suspended walkway, or on top of a compression-resistant layer (e.g. 100mm depth of woodchip), laid onto a geotextile membrane;
b) for pedestrian-operated plant up to a gross weight of 2t, proprietary inter-linked ground protection boards placed on top of a compression-resistant layer(e.g.150mm depth of woodchip), laid onto a geotextile membrane;
c) for wheeled or tracked construction traffic exceeding 2 t gross weight, an alternative system (e.g. proprietary system or pre-cast reinforced concrete slabs) to an engineering specification designed in conjunction with arboricultural advice, to accommodate the likely loading to which it will be subjected.

For situations other than those described in a) or b), the ground boarding is to be designed by a suitably qualified person to an engineering specification in conjunction with arboricultural advice, to be able to support the expected loading to be placed upon it.

In all cases, the objective of the ground boarding is to avoid compaction of the soil beneath, so that tree root function remains unimpaired.

Supervised demolition

Hard surfacing:
Removal of and or replacement of hard surfacing situated either partially or completely within the RPAs of retained trees shall be undertaken with care and under the direct on-site arboricultural supervision as these areas are likely to contain roots.
Where this is necessary the wearing course will be broken up using a hand held pneumatic breaker, hand tools and a wheel barrow to break up and remove the surfacing. If it is necessary to remove the sub base this is to be undertaken using hand tools such as a fork to loosen the material and removed using shovels and wheels barrows.
In some situations and at the discretion of the arborist it may be possibly to use an excavator using a hydraulic breaker and suitably sized toothless grading bucket. If an excavator is to be used it must be situated outside of the RPAs, on top of the hard surfacing working away from the RPAs or from ground boarding.
Which ever system is used the is to be **NO** disturbance of the soil beneath. If roots are found they are to be covered over with damp hessian and a layer of either sharp sand, wood chip or top soil to prevent desiccation.

Supervised Excavation

All excavations within and immediately adjacent to RPAs are to be undertaken under direct on-site arboricultural supervision.

Any roots that are to be cut will be cleanly severed by the project arboriculturist using a suitable hand saw or secateurs. The edge of all excavation closest to the retained trees will be covered over with damp hessian to prevent drying out, and where necessary be shuttered to prevent soil collapse or contamination by concrete.
If appropriate soil beneath the depth of the excavation may be sheet piled, legular piled or have individual piles installed.

Manual excavation:
Excavations within the RPAs will be initially undertaken by hand under direct on-site arboricultural supervision to a minimum of 600mm deep (to be confirmed by the project arboriculturist), whether its is for proposed foundations, hard surfacing or underground services. The soil is to be loosened with the use of a fork or pick and or air-spade and then cleared with a shovel and or the aid of an air-spade and air-vac.
Mechanical excavation:
Excavation within the RPAs will consist of a mixture of mechanical and manual excavation.
Where an excavator is used it will be fitted with a suitably sized toothless grading bucket; using a grading / scrapping motion rather than digging. During each motion the excavator will not be permitted to removing no more than 10 - 20mm deep of soil in any any one pass.
If any roots are discovered, mechanical excavation will immediately be stopped and manual excavation will take over to expose the root. Upon the root being uncovered and either severed or protected the excavations can then continue.
Any excavator or other machinery that is to be used will be situated outside of the RPAs of all retained trees or on top of a suitable ground protection.
Where an excavator or any other machinery is to be used within RPAs or beneath canopies the project arboriculturist will clearly instruct the operator about what they want and expect to happen prior to any works may commence.

'No Dig' Surfacing

Multi-dimmensional confinement system
Existing vegetation may be removed with hand tools or sprayed with an approved non residual herbicide such as 'Glyphosate'. The new hard surfacing will be constructed using a 'No Dig' surfacing situated entirely above the existing soil surface and where needed using a proprietary cellular confinement system (GeoWeb or similar) laid over a bi-axial geo-grid (tensar TriAx or similar). Prior to this any small hollows on the surface may be filled with clean sharp-sand (not builders sand) to a maximum depth of 150mm. The 'GeoWeb' is to be back filled by hand with a no-fines aggregate of 20mm - 30mm. The area of 'GeoWeb' will be covered with a permeable geotextile fabric and the finished wearing course laid on top. Edge supports of an appropriate size and strength should be set above ground level and secured with haunching or steel pins driven into the ground. the outer edge of the supports may be banked up with clean top soil.
NOTE: The use of a multi-dimensional confinement system will affect the finished level of the hard surfacing by raising the levels and needs to be taken into consideration when designing foundations and setting the finished floor levels of adjacent buildings.

Arboricultural Supervision

The arboricultural consultant will be required to attend site to directly supervise all demolition and construction works that have to be undertaken within the root protection areas. This will include:

1. Pre-commencement site meeting.
2. Location of protective measures.
3. Supervised demolition of hard surfacing within RPA of tree 20T.
4. Relocations of tree protective measures from demolition to construction phase.
5. Supervised excavations for fence posts within RPAsof retained trees.
6. Installation of 'No Dig' hard surfacing within the RPAs of trees of group 13G.
7. Any demolition and or excavations within or adjacent to RPAs, including foundations, hard surfacing or underground services (a non-exhaustive list).
8. Arboricultural sign off and removal of protective measures.

Arboricultural Method Statement

Please refer to Arbtech Consulting Ltd. Tree Schedule and Arboricultural Method Statement, for full details on all surveyed trees and how all aspects of the the development maybe implemented without determent to retained trees.

Indicative only

Sheet Layout

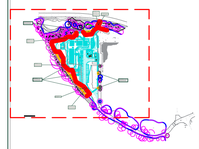

Rev:	Date:	Notes:
A	22/07/26	Addition of scale bar

arbtech
Unit 3, Well House Barns, Chester, CH4 0DH
https://arbtech.co.uk, 01244 661170

Project:
Car Park at Towcester Road,
Pavilions Court,
Trowbridge
BA14 0FY

Client:
LNT Care Developments Ltd

Drawing:
Tree Protection Plan

Based on:
BA14 0FY - A-A03

Drawing No:	Rev:
45870093_TPP_02_01	A

Date:	Scale:	Drawn:
July 2026	1:250 @ A0	JCH

Key:

Tree Nos.	1T/G/H/W	Trunks:		RPAs:	
Buffer Veterans' Ancient		Category 'A' trees:		Category 'U' trees:	
Category 'A' trees:		Category 'B' trees:		Category 'C' trees:	
Existing Site Plan:		Proposed Site Plan:		Protective fencing:	
Ground protection (fencing):		Ground protection (Pavers):		Ground protection (Sub-base):	
Arboricultural supervision - 'No Dig' HS:		Arboricultural supervision - Demolition:		Arboricultural supervision - Excavations:	

All dimensions are to be checked on site. No dimensions are to be scaled from this drawing.
Please notify us of any discrepancies found. Arbtech Consulting Ltd. cannot be held responsible for inaccuracies in drawings that have been digitally altered.
This drawing is designed to reflect the principles of the layout or design only, and relates only to the protection of retained trees.
This drawing is not to be read as a definitive part of the engineering or construction designs or method statement. An architect or structural engineer should be contacted over any matters of construction, detailing or specification and for any standards or regulatory requirements relating to proposed structures, hard surfacing or underground services.
This drawing was produced in colour - a monochrome copy should not be relied upon.

© Arbtech Consulting Ltd, 2021