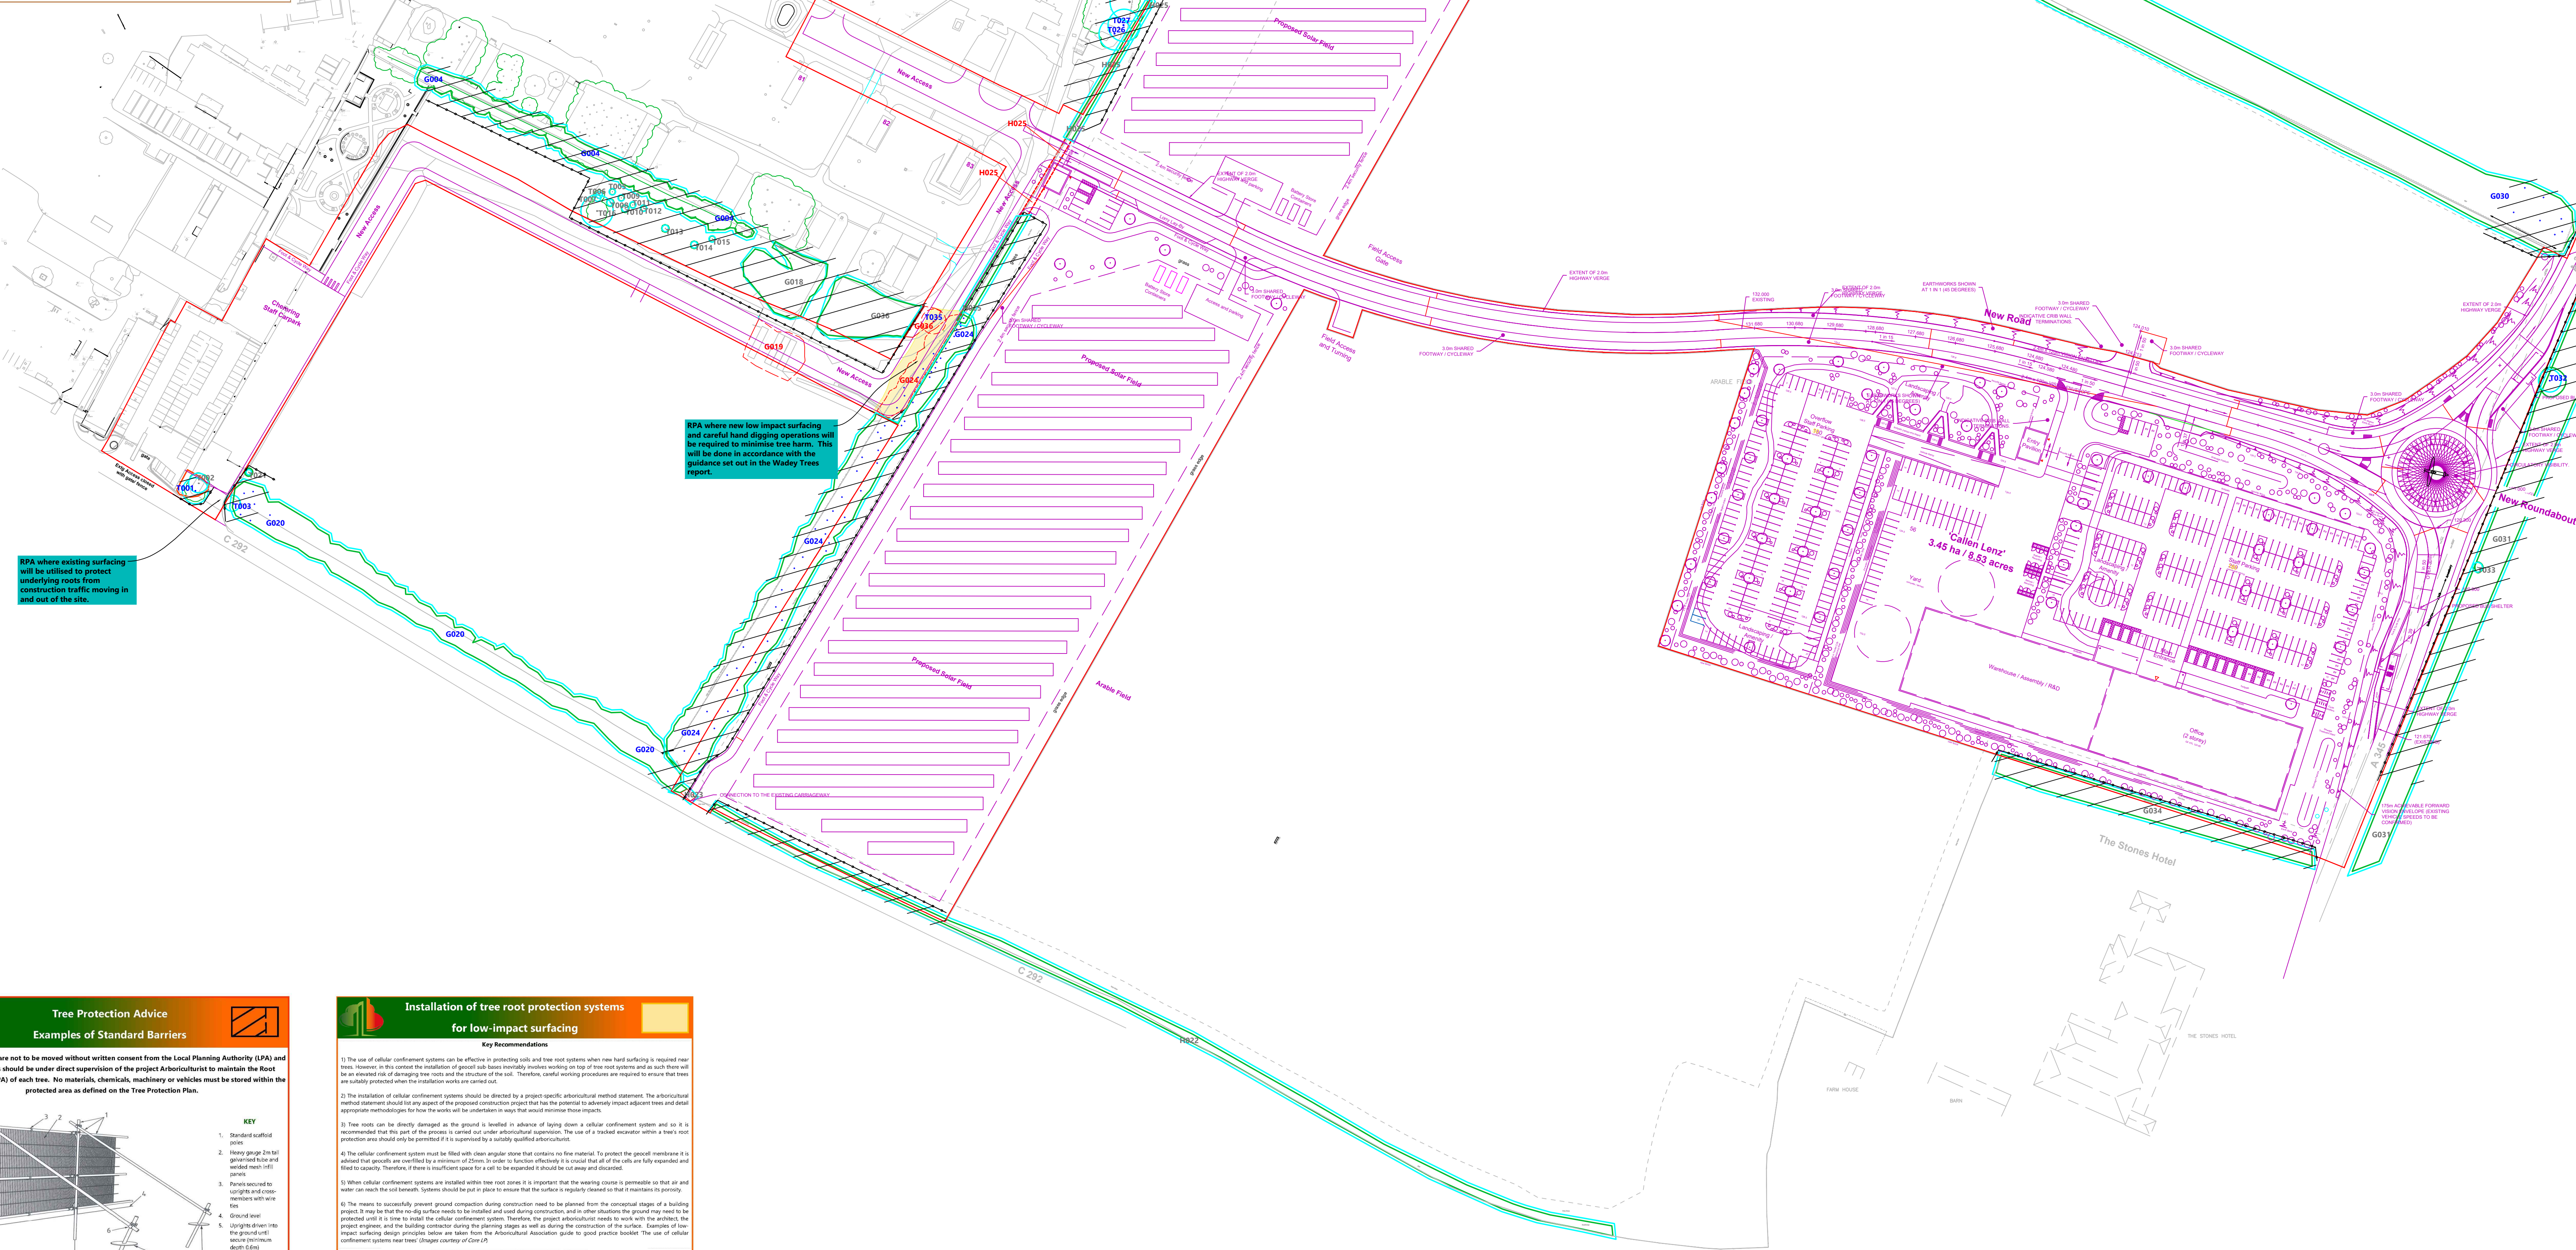


[illegible][illegible]

Tree Protection Advice
Examples of Standard Barriers

Protective barriers are not to be moved without written consent from the Local Planning Authority (LPA) and any adjustments should be under direct supervision of the project Arboriculturist to maintain the Root Protection Area (RPA) of each tree. No materials, chemicals, machinery or vehicles must be stored within the protected area as defined on the Tree Protection Plan.

KEY

1. Standard scaffold tubes
2. Heavy gauge 2x12 galvanized steel or solid wood rail
3. Posts secured to upright and cross members with steel rods
4. Ground anchor
5. 100mm diameter x 100mm galvanized steel plate
6. Standard scaffold cap
7. Standard scaffold corner

Extract from BS5837:2012 Figure 2 – Detail: specifications for tree protective fencing.

Image 1: Scaffold and Heia panels can provide standard protection that is fit for purpose.

[illegible][illegible]