


Incorporation of Bat Roosting
One integrated bat box such as Schwegler 1FR located at eaves level on the South or East facing elevation, not directly above a window. Another bat box such as Schwegler Bat Box 2F should be pole mounted if no suitable trees are present. This should be a minimum of 4 metres above the ground, away from artificial light sources in a position sheltered from wind but ideally South/South-east or South-west so it is exposed/warmed by the sun for part of the day and should be in position **before** any commencement of works.



Location of Swift Box
Swift nest boxes can be placed on any aspect of a building, but it is important to avoid locations receiving full, direct sunlight for most of the day, to avoid chicks overheating. East, West or North aspects are all fine. If the box must face South, please ensure it is shaded from the summer sun (May to July inclusive) under wide eaves, or equivalent.

THIS DRAWING IS THE COPYRIGHT OF BARCLAY + PHILLIPS ARCHITECTS. CONTRACTOR WILL BE HELD RESPONSIBLE FOR THE ACCURACY OF WORKS INVOLVING THE SETTING OUR AND CHECKING OF ALL DIMENSIONS ON THE DRAWING AND ON SITE. DIMENSIONS MUST NOT BE SCALED FROM THIS DRAWING.


PLANNING

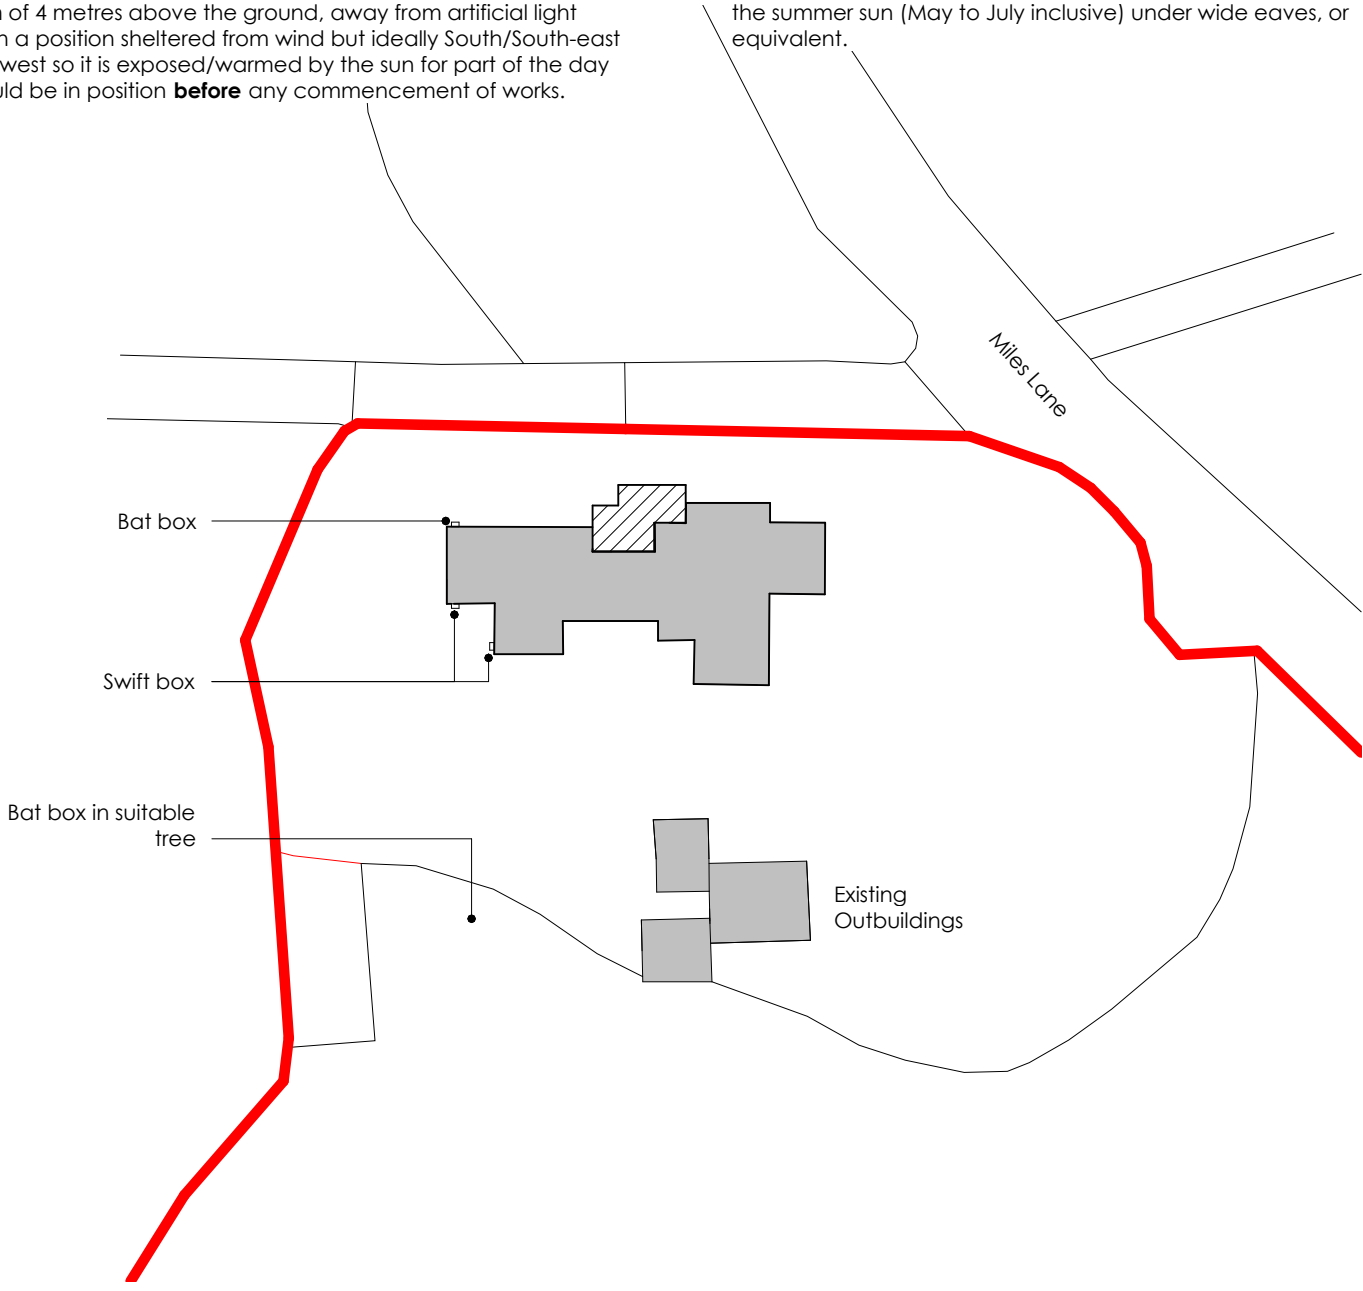

2 Proposed Block Plan
1 : 500

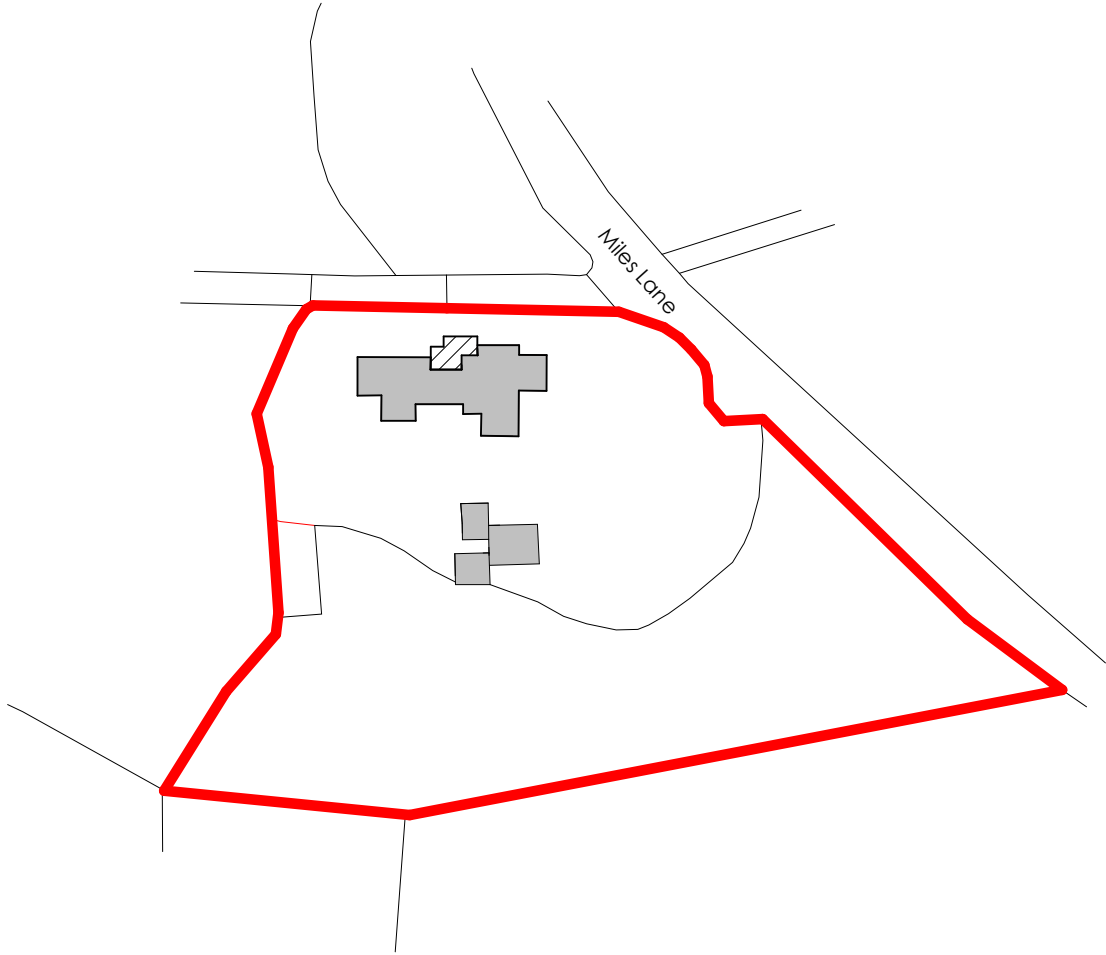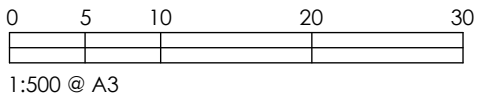

1 Proposed Location Plan
1 : 1000



A	Bat + Swift info added	05.08.26	
Rev	Description	Date	By

